



4.1. System Disassembly Procedures




Please refer to the disassembly procedures of the GK5CP0Z.

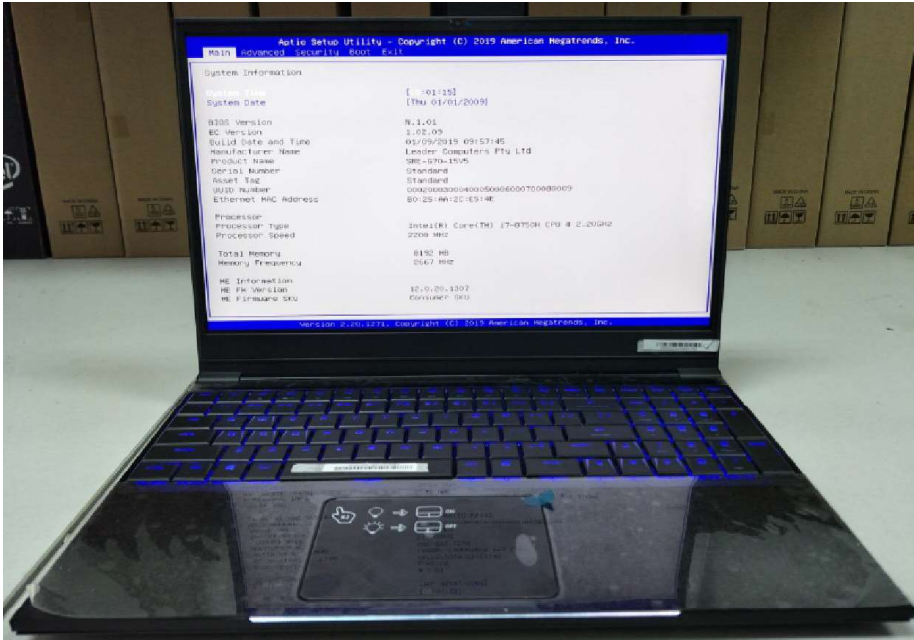

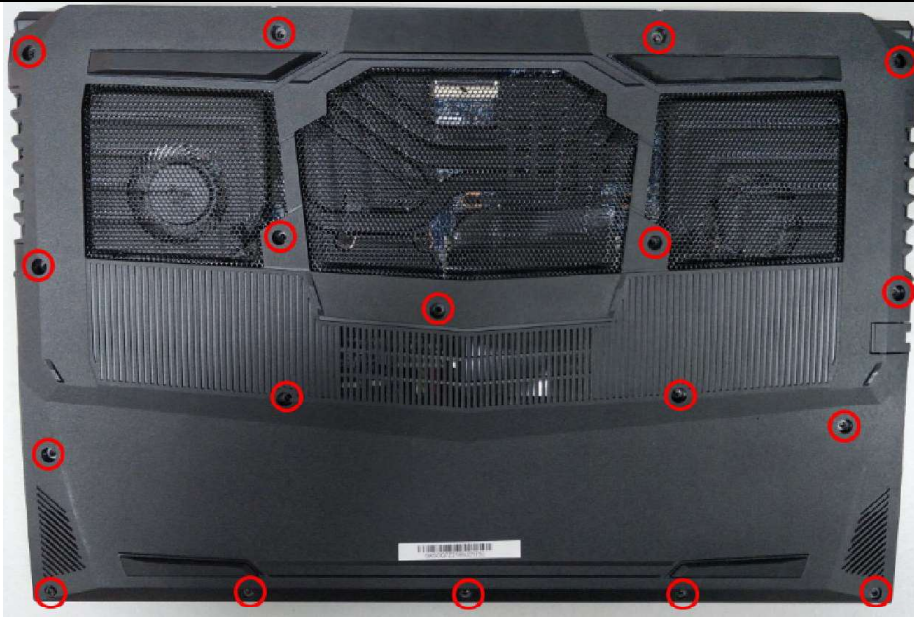


1. Unfasten eighteen screws and take out the bottom cabinet.

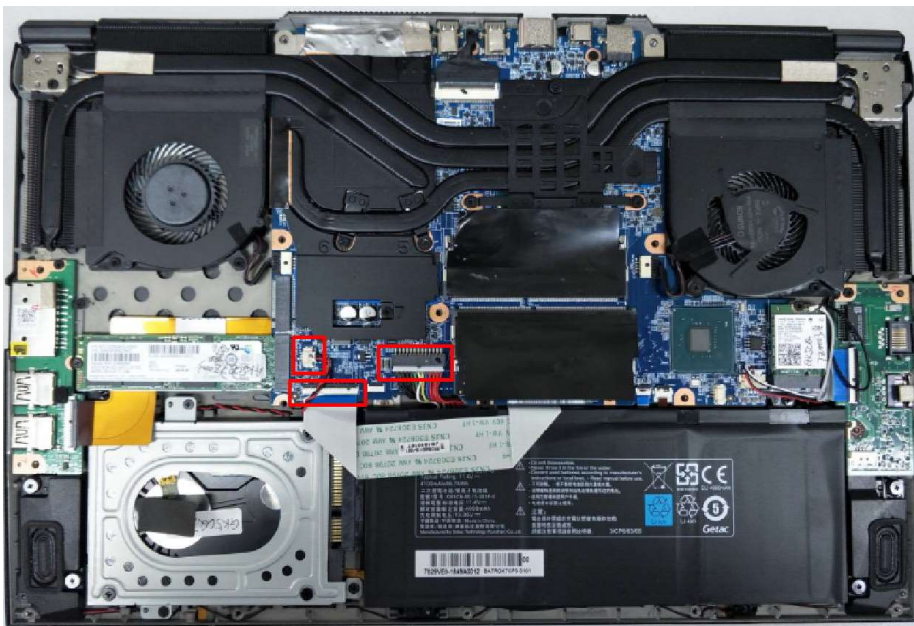


2. Unfasten cables




3. Unfasten seven screws and pull out the battery, HDD module

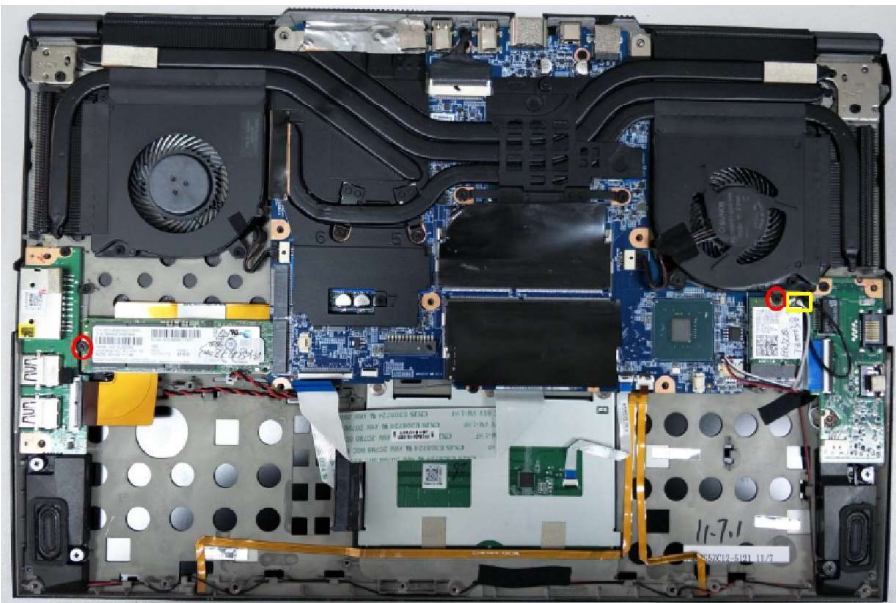

4. Unfasten two screws disconnect the wlan antenna. take out the SSD, WLAN

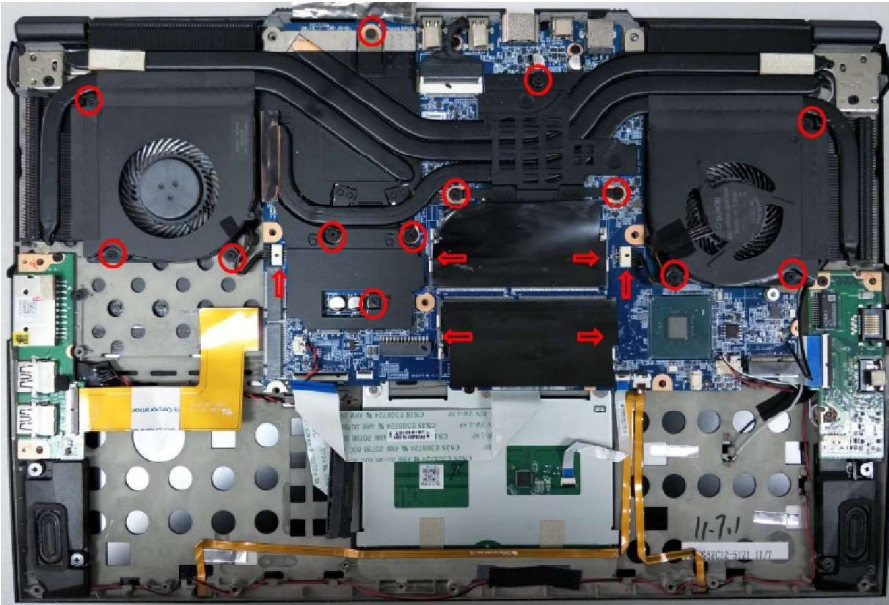

5. Unlock the RAM and take out the RAM. Unfasten thirteen screws of the FAN and the thermal module. Disconnect the cable of the Fan then remove them

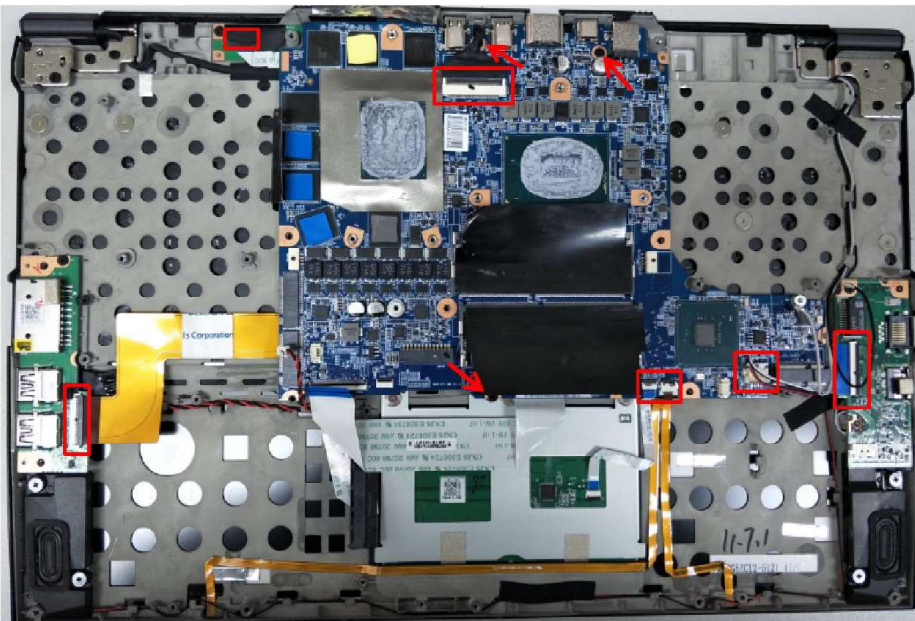

6. Unfasten three screws & cable, take out the M/B