

Notebook PC Service Manual

Model: GM5MPHW

Chapter 4 System_Disassembly


4.1. System Disassembly Procedures.....	3-8
4.2. LCD Display Panel Disassembly Procedures.....	9-10

4.1. System Disassembly Procedures



Please refer to the disassembly procedures of the GM5MPHW



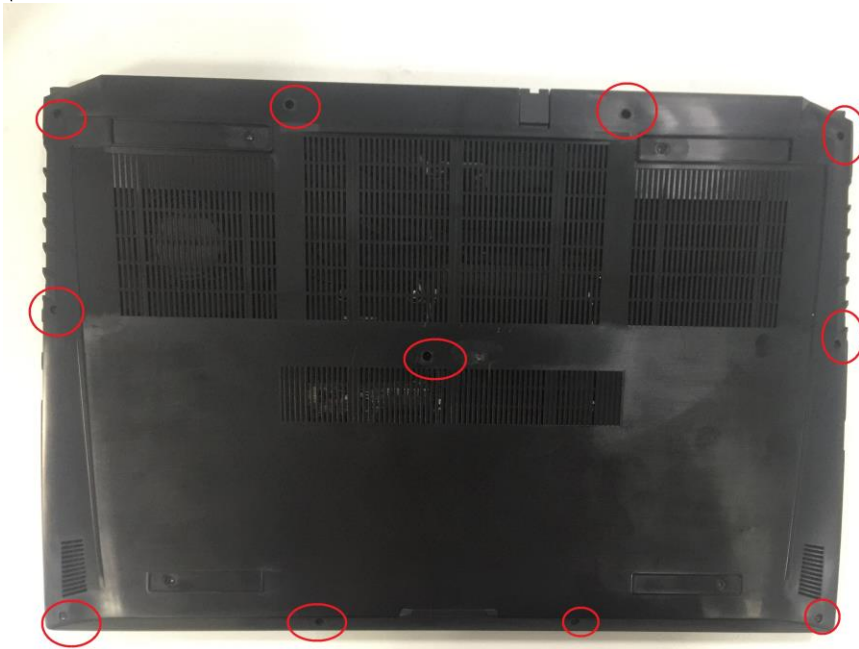

1. Unfasten screws and take out the bottom cabinet.



2. Unfasten cables




3. Unfasten screws and pull out the battery




4. Unfasten two screws disconnect the wlan antenna. take out the SSD,WLAN




5. Unlock the RAM and take out the RAM. Unfasten screws of the FAN and the thermal module. Disconnect the cable of the Fan then remove them

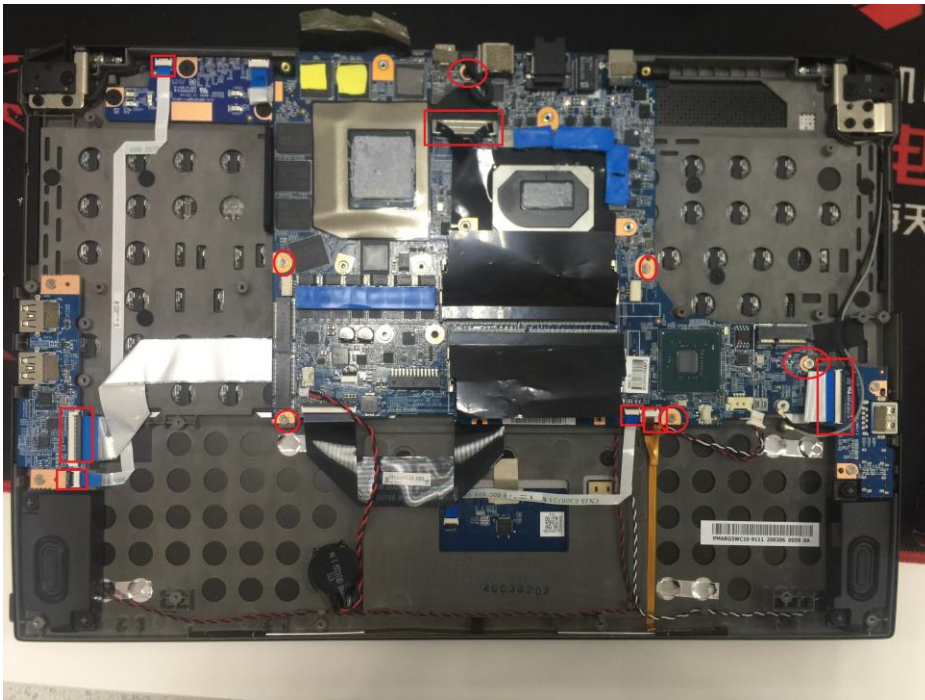


6. Unfasten screws & cable, take out the M/B

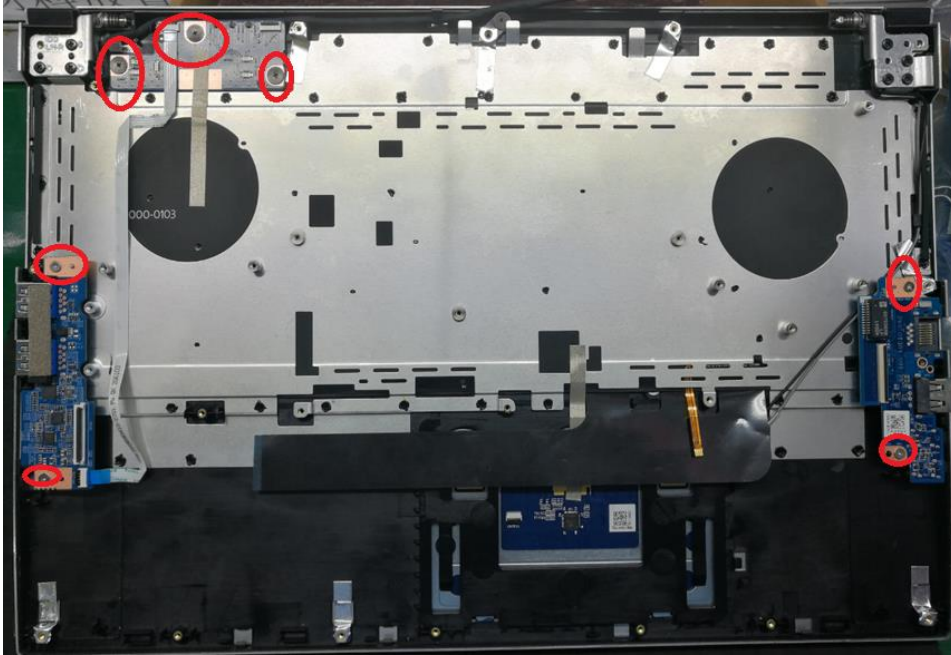

7. Unfasten seven screws. take out the USB board & audio board & power board.

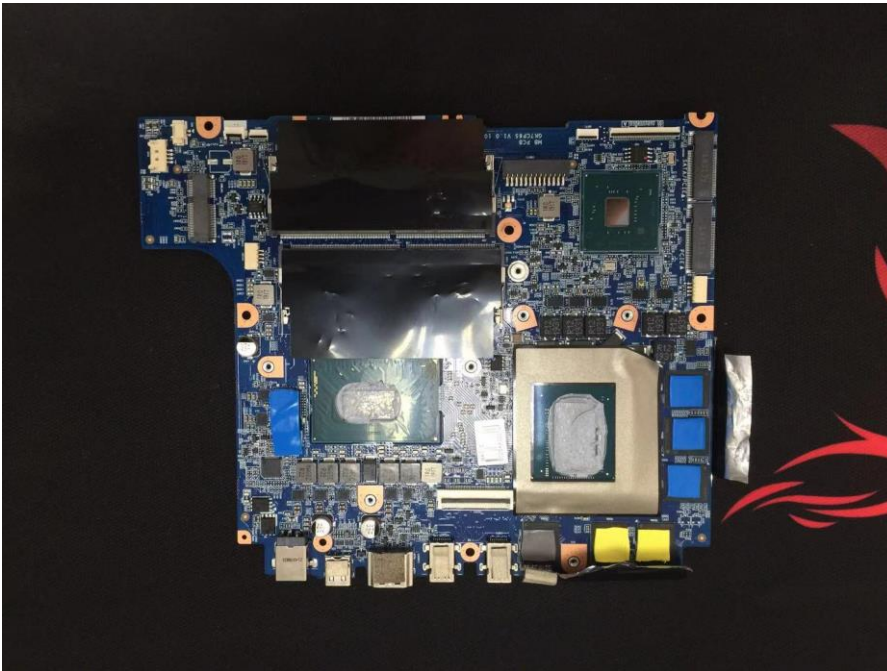

8. The mother-board disassembly finished.

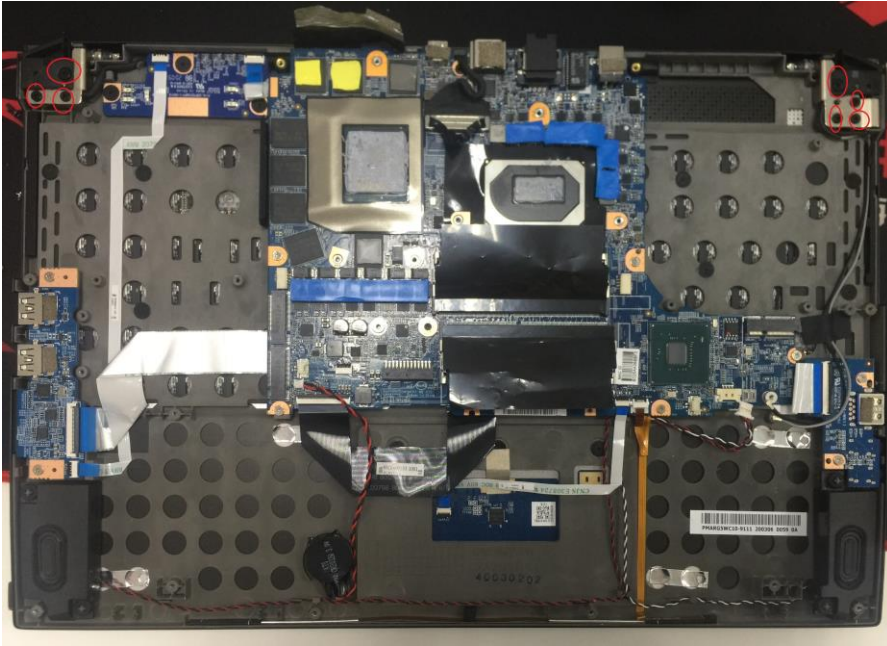

9. Unfasten seven screws and separate the LCD module from the bottom.



10. The LCD module.

4.2. LCD Display Panel Disassembly Procedures



1. Pull up the front bezel.



2. Gently disassemble the LCD front cabinet.



3. LCD display panel disassembly finished.